INTEGRITY PRODUCTS

Clamp Cover

Always wear appropriate PPE (personal protective equipment) which conforms to applicable work safe standards.



MEASURE TO ENSURE PROPER FIT


Measure the length, width, and depth of the pipe clamp to determine the correct size of the Clamp Cover required.





FRONT VIEW

SIDE VIEW

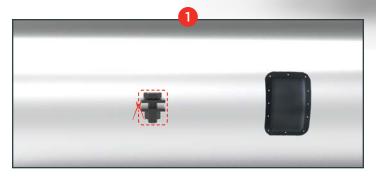


STEP 1

FOR NEW INSTALLATION Cut out jacketing keeping it as close to the clamp as possible.

NOTE: ensure the jacketing surface is clean from dirt, debris, and moisture.

FOR PRE-EXISTING OPENINGS For pre-existing openings around protrusions, inspect the jacketing surface thoroughly and ensure the opening is smaller than the perimeter of the Clamp Cover application.

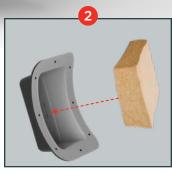

STEP 2

Stuff the Clamp Cover with insulation as required.

TOOLS REQUIRED



TIN SNIPS



SEALANT



SCREWS




STEP 3

Apply sealant at the flanged face and place it over the jacketing around the protusions.



STEP 4

Fix the Clamp Cover in place and install the screws.

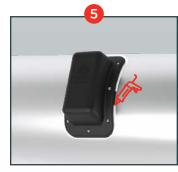

STEP 5

Apply a bead of sealant around the circumference of the Clamp Cover.