 
INTEGRITY PRODUCTS

 
Insulation **Spacer**


NO TOOLS REQUIRED!

The Integrity Insulation Spacer is simple to install and does not require the use of any tools. Simply push the spacer firmly into the insulation, to the full depth of its anchor.

At a minimum, the spacers should be installed at the 2, 4, 8 and 10 o'clock positions, and this frequency should increase with the pipe/insulation size, as it allows.





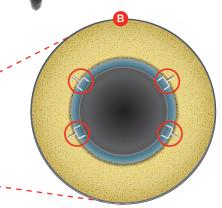

INSTALLATION GUIDE



B install at minimum in the 2, 4, 8 & 10 o'clock positions

ONLINE VIDEO
http://l.ead.me/bb0Sy0



